


## Installation Instructions – Face Mount Door Kits with Loop System

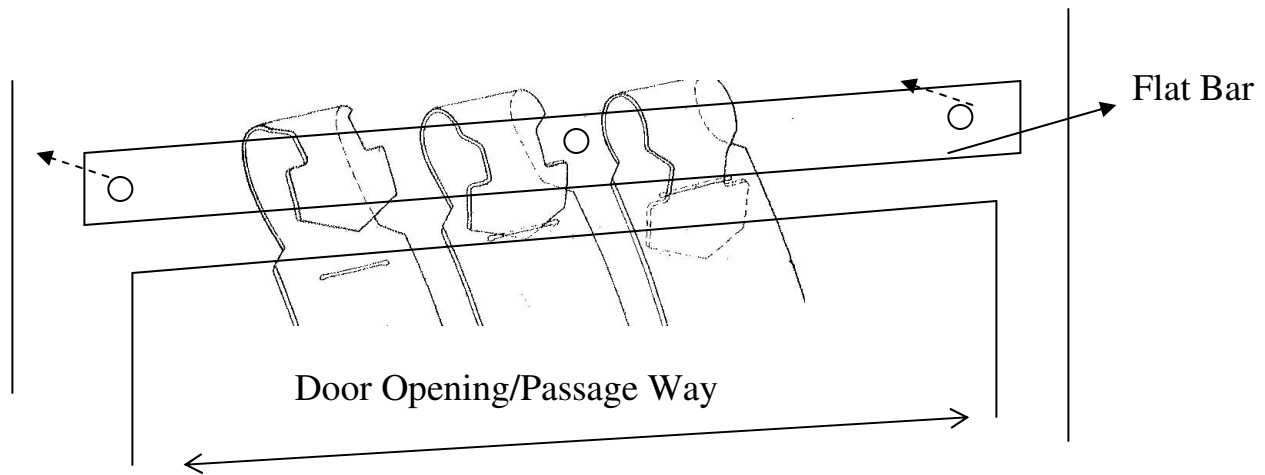

- 1- Locate Stud or surface in which to screw or anchor fasteners (make sure strips are long enough when suspended from bracket (simply hold up the strip and check length)
- 2- Locate fasteners ( screws/anchors ) and attach flat bracket loosely at each end.
- 3- Drape all self fastening strips around the bracket and tuck the arrow portion into the punched slit for each strip (as shown above).
- 4- Check to see that all strips are as straight as possible and that the overlap is uniform across door.
- 5- Should the strips be too long, they can be trimmed with a utility blade at the bottom.
- 6- If orange safety strips are shipped make sure they outline the door on both sides.
- 7- Tighten fasteners (screws/anchors) and sandwich the pvc strips against the wall face.

Note : Tools Required Include

Stud finder, level, electric drill, utility blade

***Stripcurtains.com***